

INSTALLATION INSTRUCTIONS FOR HOCHIKI ANALOGUE HEAT SENSORS TYPE: ACB

INTRODUCTION

Analogue Heat Sensor	ACB-EW ACB-ASW
Attachment Board	YBN-R / NA


Other combinations of sensor and board are also possible.
Please confirm with Hochiki or the appointed sales agent.

Ensure that the following items are observed before installation and maintenance.
Hochiki cannot warrant a sensor's performance if such items are neglected.

CAUTION

- This sensor is used to detect conditions and changes in temperature and cannot detect smoke or other phenomena.
- This sensor cannot be used to prevent FIRE itself, it is only intended to detect a certain characteristic of fire.
- When installing this sensor, ensure that the location of each sensor has been planned in accordance with appropriate local and National fire regulations or recommendations.
- The detector shall not be installed in the following environmental conditions:
 - Situations in which condensation exists.
 - Situations in which corrosive gases exist.
 - Situations in which dust or steam exist.
 - Situations in which obstacles exist, which could impede airflow to the detector.
- Certain actions can cause permanent damage to the sensor and therefore if the sensor is subjected to any of the following actions it should not be used:
 - Disassembly and reassembly.
 - Impact or shock.
 - Touching the thermistor of the sensor (the thermistor is black and located in the centre of the sensor).
- The sensor should therefore be replaced after a fire has occurred if damage is suspected.
- After installation, all sensors on the fire alarm system should be tested to verify correct operation.
- Installation and maintenance should only be carried out by suitably trained personnel.
- The sensor must be subject to periodic maintenance during regular service visits, which should be as recommended by appropriate local and National Standards or recommendations. In the event of no such Standards existing, Hochiki recommend that the minimum period of maintenance should be 1 year and that the following items should be taken into account:
 - In cases where there is an excess built up of dust on the thermistor, the sensitivity of the sensor could be affected.
 - A regular operational test should be performed.
 - A visual check for staining and mechanical damage should be made.
- Sensor operation should not be verified by the use of a naked flame or open fire.
Operation should only be checked by equipment that is capable of exceeding the required detection threshold by a small amount sufficient to guarantee a fire signal is produced by the sensor.

EXTERNAL VIEW

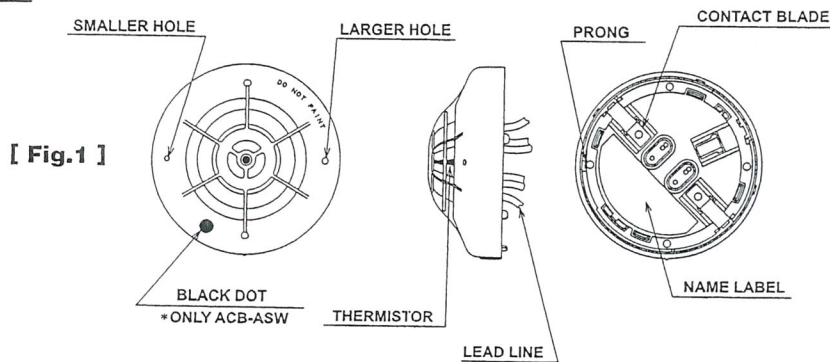

SETTING THE ADDRESS

- Each sensor must have its address set before system operation.
- Using the installation plan which shows the proper location for each sensor, find the address for the sensor to be installed. Ensure that the address and location on the plan match correctly.
- Address is set to 127, when shipping from a factory.
- For address setting, use the address programmer and write the number on the label of the sensor after setting.
- When address changing, renew the number on the label.
- See the instruction manual of the Hand Held Programmer (TCH-A200 or TCH-B100) about detail of setting method.


WIRING

The wiring diagram for the analogue sensor lead line should be made as shown in Fig. 2.

CONNECTION PROCEDURE

1. Communication line S and SC wiring should be performed by monitoring wiring.
2. Use Clamp sleeve to connect wires from detector and control panel.
After that, wrap insulation vinyl tape after wrapped self-adhesive rubber tape.
3. Also, finishing of un-connected wire(s) of sensor should be wrapped insulation vinyl tape after wrapped self-adhesive rubber tape.

[STANDARD CONFIGURATIONS]

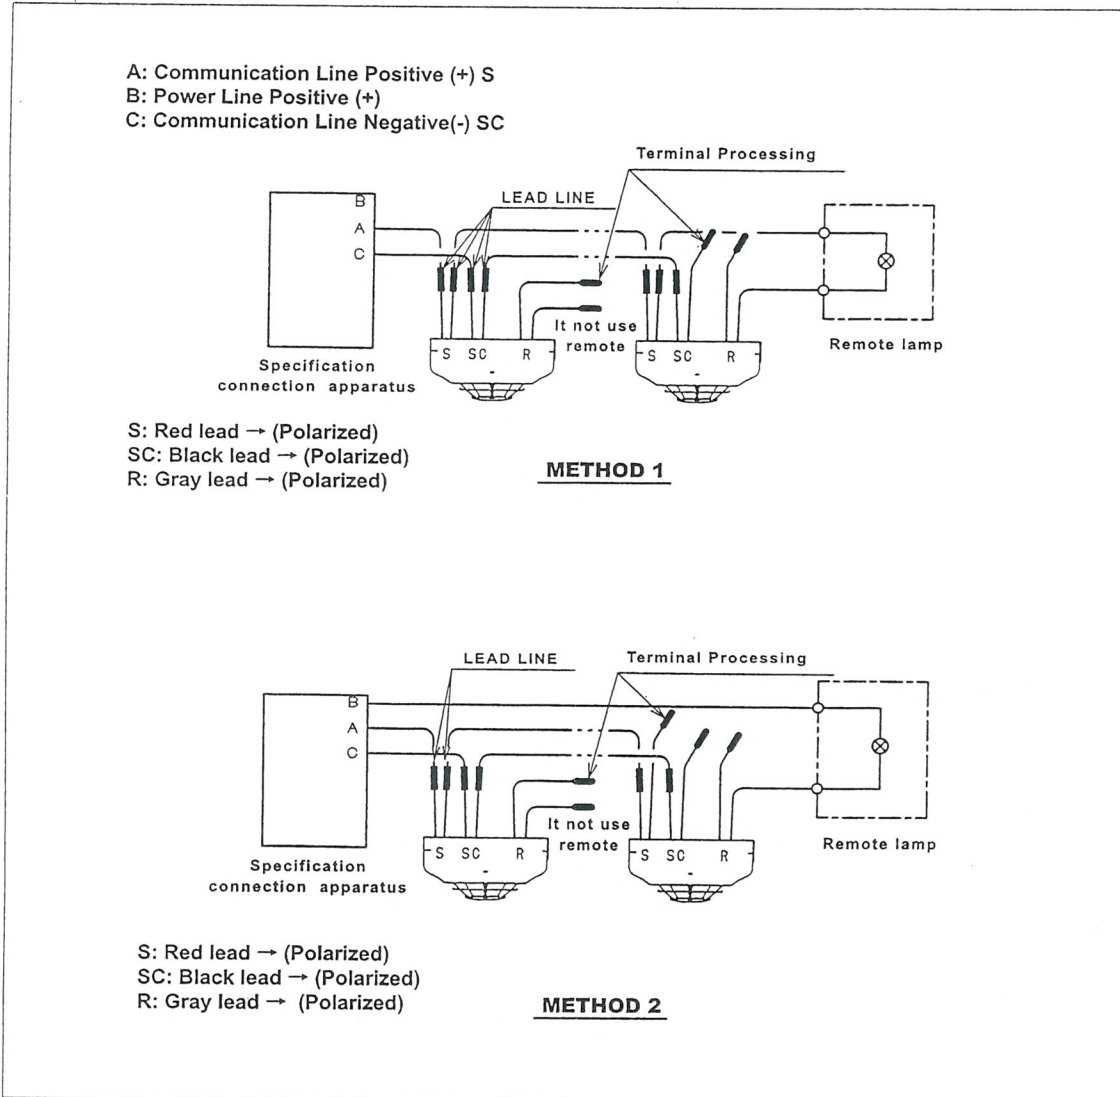

[Fig.2]